


FRANKENSTEIN TRIKES

MEASURING FOR CUSTOM FENDER BRACKETS

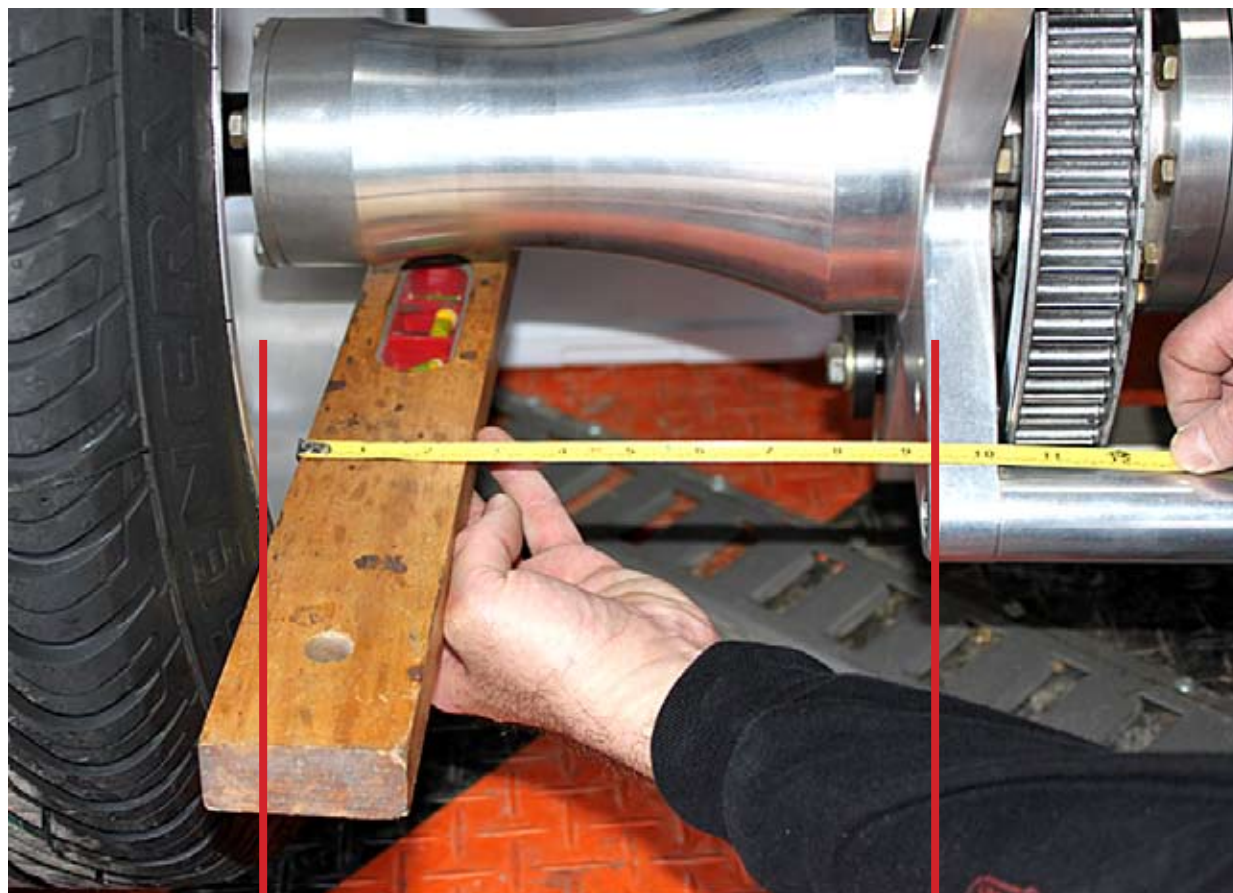

$9 \frac{5}{16}$

Using straight edge against tire measure distance to outer edge of starplate.